

Thank you for purchasing this TradeQuip product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.



IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY, AND WILL INVALIDATE THE WARRANTY. PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE USE.


1. SAFETY INSTRUCTIONS

- ✓ Only use this Mobile Workshop Table for the purpose for which it has been designed.
- ✗ Do not modify any component of this Mobile Workshop Table.
- ✓ When servicing, use only TradeQuip identical replacement parts. Use of any other parts will void the warranty.
- ✓ Safe Working Capacity 100kg.
- ✓ For your safety, ensure the brake is on.
- ✓ This bench is for use on level surfaces.
- ✓ This product is intended for indoor use only.



2. CONTENTS & SPECIFICATIONS

- Safe Working Capacity: 100kg
- Adjustable Working Height: 840-1210mm
- Main Post Diameter: 50mm
- Castor Wheel Diameter: 50mm
- Table Top Dimensions: 750x480x25mm

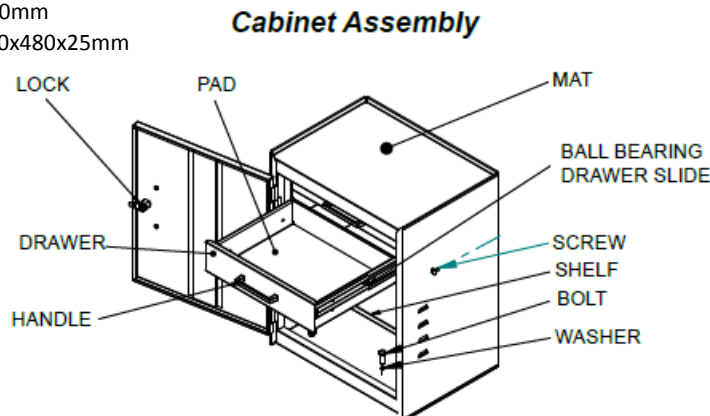

3. ASSEMBLY INSTRUCTIONS

BALL BEARING SLIDE DRAWERS

1. Ball bearing slides have black retaining clips. To remove drawer, push the lever up (right hand side) and down (Left hand side) simultaneously, and pull the drawer out.
2. To reinstall drawers. Simply place drawer onto slides and push in fully.

WARNING:

- Maximum capacity of each drawer is 10kg

