

Periodic maintenance is essential for the efficient operation of Manual Clutch jacks. Lack of lubrication can cause severe wear and or premature failure.



Lubrication Procedure


1. All lower lift arm pivots and pins in all linkages should be lubricated with a Light Bearing Grease or 30/40W Machine Oil to ensure long life and prevent premature wear.
2. Wheels and Castor axles and bearing races should be lubricated with a Light Bearing Grease or 30/40W Machine Oil to ensure long life and prevent premature wear.
3. Cradle Pins, Pivots and Splined adaptors should be lubricated with a Light Bearing Grease or 30/40W Machine Oil to ensure long life and prevent premature wear.




BORUM CLUTCH JACK LUBRICATION PROCEDURE

Product Code: BCJ130

4. Pivoting Pump Handle Type Mechanisms should be lubricated with a light bearing grease or 30W/40W Machine Oil.

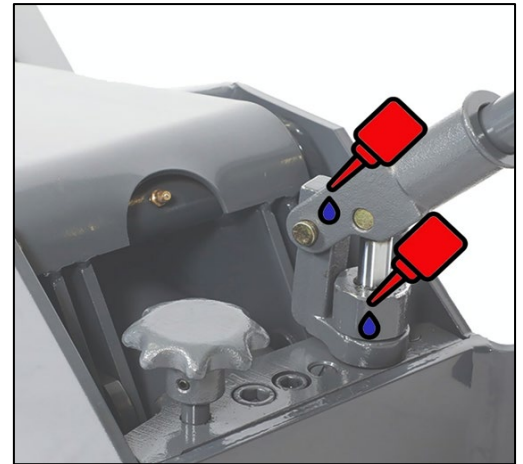

5. The main load bearing pivot pin should be regularly greased with a light bearing grease.

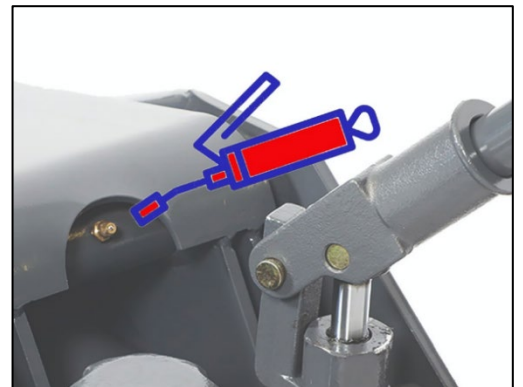

**The Borum, TradeQuip and TQpro range of Jacks use 32 Grade Hydraulic oil for the correct operation and compatibility with the seals used in their construction.*