


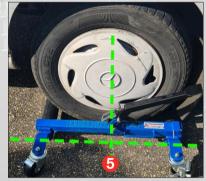

## to extend the life of your 1054T TradeQuip Vehicle Positioning Jack

Ensure safe movement of your Vehicle Positioning Jack whilst under load.

To ensure safe movement of your Vehicle Positioning Jack whilst under load, always make sure the roller legs are at 90 degrees to the vehicle wheel to allow for smooth raising and reduce slippage. Roll on a smooth surface free of cracks, crevices and tripping hazards that can foul the wheels.



## Safe Working Capacity

Tyre width, Diameter and Vehicle Gross weight are important factors to consider when using your TradeQuip Vehicle Positioning Jacks. For your safety you should not exceed the 680Kg Load Rating, 280mm Maximum tyre width and 750mm Maximum Tyre Outside Diameter.



## Hazards and Obstructions.

All wheeled TQB Brands equipment must be used on smooth surface free of cracks, crevices and tripping hazards that can foul the wheels during operation or relocation.

Correct storage is vital to the longevity of your Vehicle Positioning Jacks.

Always store the Vehicle Positioning Jacks in a dry dust free area to minimise corrosion and keep the ratchet and pawl assembly clean.

Read the user Manual thoroughly and keep a copy easily accessible or visit our webpage www.tqbbrands.com.au for instructional documents & pre-start videos.





