

# PRODUCT CODE: E19-0080 UNDER HOIST OIL DRAINER

# **OWNER'S MANUAL**

Bowl Capacity (L)	Bowl Dimensions LxWxH (mm)	Minimum Height (mm)	Maximum Height (mm)	Weight (KG)
20	515 x 515 x 230	1215	2015	10





### **WARNING**

### IMPORTANT: READ ALL INSTRUCTIONS BEFORE USE



WARNING



The instructions and warnings contained in this manual should be read and understood before using or operating this equipment. Do not allow anyone to use or operate this equipment until they have read this manual and have developed a thorough understanding of how this equipment works. Failure to observe any of the instructions contained in the manual could result in severe personal injury to the user or bystanders, or cause damage to the equipment and property. Keep this manual in a convenient and safe place for future reference.

Whilst every effort has been made to ensure accuracy of information contained in this manual, the TQB Brands Pty Ltd policy of continuous improvement determines the right to make modifications without prior warning.

### **CONTENTS**

Warning & Contents	Page 2
Safety Instructions & Pre-operational Safety Checks	Page 3
Features & Assembly	Page 4
Operation, Storage & Maintenance	Page 5
Parts List & Diagram	Page 6
Warranty	Page 7





### **SAFETY OPERATING INSTRUCTIONS**



Safety glasses must be worn when operating this equipment



Long loose hair must be contained when operating this equipment.



Safety footwear must be worn when operating this equipment.



Close fitting/protective clothing must be worn when operating this equipment.



WARNING: Oil/Coolant temperature must not exceed 50°C





WARNING: High temperatures will damage drain valve



#### PRE-OPERATIONAL SAFETY CHECKS

Save these instructions. For your safety, read, understand, and follow the information provided.

- Do not extract flammable liquids.
- Do not expose the reservoir to ANY source of heat.
- Ensure the oil/coolant temperature does not exceed 50°C so as to not damage the rubber seals .
- Use eye and hearing protection. Always wear AS approved impact safety goggles and a full face shield when working with this product.
- Only use on a flat surface capable of supporting the Oil Drainer and its maximum load.
- Dress safely. Non-skid footwear or safety boots should be used when working with the product. Do not wear loose clothing or jewellery.
- Do not allow children in the work area.
- Dispose of oil/coolant properly in accordance with all local laws and regulations.
- Never leave unit unattended when operating or emptying.
- Never use near open flame or heat source.
- Always check that bowl valve is closed/sealed before draining oil/coolant into the bowl.
- Never use unit for handling anything other than oil or coolant.
- Observe work area conditions. Keep area well lit.
- Check for damaged parts. Before using any product, any part that appears damaged should be carefully
  checked to determine that it will operate properly and perform its intended function. Check for any broken or
  damaged parts and any other conditions that may affect its operation. Replace or repair damaged or worn
  parts immediately.
- When servicing, use only eQuipt identical replacement parts. Use of any other parts will void the warranty.
- Use the right product for the job. There are certain applications for which the Oil Drainer was designed. Do not modify the Oil Drainer and do not use the Oil Drainer for a purpose for which it was not intended.

#### INTENDED USE

The eQuipt Oil Drainer is designed for safe collection of engine oil, transmission oil/ATF, or coolant up to a maximum temperature of 50°C (122°F) from vehicles in automotive, agricultural, and industrial settings.




### **FEATURES & ASSEMBLY**


### **FEATURES**

The eQuipt Oil Drainer offers a straightforward waste oil, coolant and ATF disposal system, featuring a square, lightweight polymer drain bowl for easy handling. It includes telescopic height adjustment with a positive lock for secure positioning, a sturdy and dependable base for stability, and an adaptor for convenient emptying into bulk waste oil tanks.

### **ASSEMBLY**

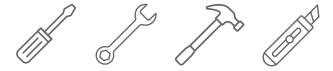

- 1. Install the support rod into the seat.
- 2. Secure the support rod with the M10 flat washer, M10 spring washer and M10 bolt.
- 3. Install the bowl onto the height adjusting rod.
- 4. Test with water to ensure drain bowl valve is sealing correctly.
- 5. Fit the 205L oil drum adaptor to a waste oil drum.

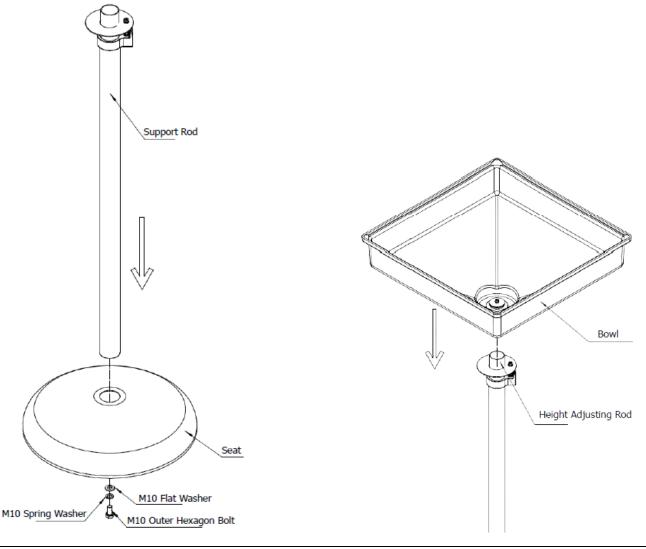



### **OPERATION, STORAGE & MAINTENANCE**

### **OPERATION**

- **1. Position the Drainer:** Place the Oil Drainer on a flat, stable surface beneath the raised vehicle, centering the drain bowl directly under the drain plug to catch the oil/coolant flow.
- 2. Raise the Bowl: Using the height adjusting rod and friction lock, set the bowl to the required height.
- **3.Remove Drain Plug:** Ensure all tools and personnel are clear, then carefully remove the drain plug to start drainage. Note that the initial flow rate will be high, tapering off as the volume decreases, which may alter the trajectory and pressure—adjust the drainer position if needed to contain the flow.
- **4. Monitor Fluid Level:** Continuously observe the fluid level in the drain bowl during drainage to prevent overfilling; do not exceed the 20L capacity.
- **5. Empty the Bowl:** Once full or drainage is complete, use the included 205L drum adaptor to safely transfer the collected fluid into a waste oil or coolant drum, following local disposal regulations.

#### **STORAGE**

The eQuipt oil drainer should be cleaned before storage and stored in the lowered position.

#### MAINTENANCE

Replace or repair damaged parts. Use recommended parts only. Non authorised parts may be dangerous and will invalidate the warranty.


#### **SERVICE AND REPAIR**

Any eQuipt Oil Drainer found to be damaged, worn, or operating abnormally must be removed from service until repaired by an authorised service agent. Owners and/or operators should know that repairing this product may require specialised equipment and knowledge. Use only authorised parts, labels, and decals on this equipment. An annual inspection by an authorised repair facility is recommended to ensure the Oil Drainer remains in optimal condition and features the manufacturer-specified decals and safety labels.





## **DIAGRAM & PARTS LIST**

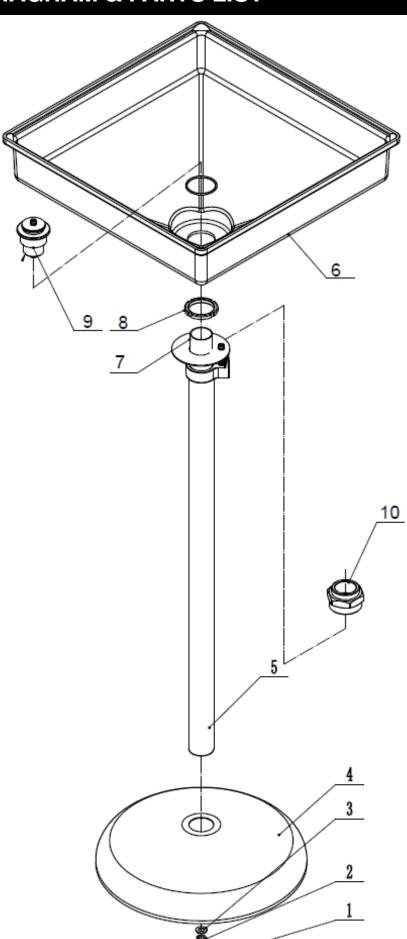

ITEM	DESCRIPTION	QTY
1	M10 Outer Hexagon Bolt	1
2	M10 Spring Washer	1
3	M10 Flat Washer	1
4	Seat	1
5	Support Rod	1
6	Bowl	1
7	Height Adjusting Rod	1
8	M48x1.5 Lock Nut	1
9	One-way Valve	1
10	Drain Adaptor	1



### **WARRANTY**

### **eQuipt Product Warranty Information**

All eQuipt products undergo thorough testing and quality assurance procedures prior to dispatch to ensure they are free from defects in materials and craftsmanship. A warranty is provided for a period of twelve months from the date of purchase. This warranty shall be void if the product is leased or hired out to third parties.

### Warranty Claim Process

Should you experience any issues with your equipment, please return the complete product to your nearest authorized warranty repair agent or contact the TQB Brands Pty Ltd Warranty team at warranty@tqbbrands.com.au.

- If an inspection determines that the fault is due to defective materials or workmanship, repairs will be conducted at no cost to you.
- This warranty does not cover normal wear and tear or damages resulting from misuse, careless handling, unsafe practices, alterations, accidents, or repairs attempted by anyone other than an authorized TQB Brands Pty Ltd repair agent.

### **Important Notes**

• This warranty supersedes any other expressed or implied guarantees, and modifications to its terms are not permitted.

Your TQB Brands Pty Ltd warranty is valid only if you can provide a dated receipt or invoice as proof of purchase within the 12-month period.

Consumer Guarantee Our goods come with a guarantee that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.













