

PRODUCT INFORMATION

How to extend the life of your Hydraulic Motorcycle Lift

9 Top Tips

to extend the life of your TradeQuip Hydraulic Motorcycle Lift Model 2102T


1 Personal Safety

Correct PPE should always be worn whilst operating any Motorcycle Lift.



2 Setting Up and Leveling the Lift

To ensure safe operation your TradeQuip Motorcycle Lift must be used on a flat level surface. The 2102T model has stabilizing legs that should be used to achieve a safe, stable and level lift platform.

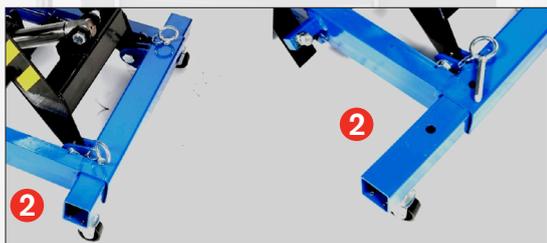

3 Ensure Hydraulic Oil is at correct levels


Remove the filler bung and fill the reservoir with SAE 32 hydraulic oil to within 5mm to 10 mm below the filler hole. Replace the filler bung and test the jack throughout its entire stroke to ensure full stroke is achieved adding additional oil as required.

Do Not Overfill.



4 Frame Pivots, Rollers, Wheels and Castors Lubrication

Wheels, Castors, Pivots, Pins and Rollers should be lubricated with a Light Bearing Grease or 30/40W Machine Oil to ensure long life, smooth operation and prevent premature wear

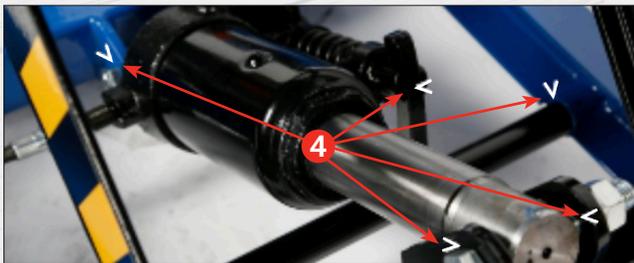

5 Safety Locking Device

Your TradeQuip 2102T Motorcycle Lift comes with a Safety Height Locking device consisting of three pin holes per side of the table frame and a locking pin. For your safety this device must be used when any load is applied to the lift platform.



Raise to the desired height then insert the pin and operate the hydraulic release to take load onto the locking device assembly.

6 Mounting Your Motorcycle

Do not use the leading plate to support the weight of the motorcycle when lifting. The leading plate is only used to assist with wheeling the motorcycle onto the platform when the lift is as its lowest level. Align the front or rear wheel within the wheel clamp Jaws and close the Jaws until the motorcycle is held firmly in a vertical position.



7 Hazards and Obstructions.

All wheeled TQB Brands equipment must be used on smooth surface free of cracks, crevices and tripping hazards that can foul the wheels during operation or relocation.

8 Storage

When not in use, the lift must be stowed in the lowest position in a dry location to minimize ram and piston corrosion.



9 Read the user Manual thoroughly and keep a copy easily accessible or visit our webpage www.tqbbrands.com.au for instructional documents & pre-start videos.